

# What Kind of Oil Do You Have to Use for Diaphragm Airless Sprayer?



## Frequency of oil change

- First time after using 50 hours.
- From next time every 200 hours.

**⚠ Please change the oil after using 50 hours at first time.**

At the beginning of use, the metal parts rub against each other and metal powder comes out. Therefore, you need to do oil change for 50 hours in order to throw the powder away.

**⚠ Please add the oil if the oil level has been decreased.**

If you continue using the sprayer with oil shortage, the pump and engine will be burnt and the sprayer will stop working. It will cost very expensive to replace the pump and engine.



## Recommended oil

**SEIWA** Genuine Airless Oil  
Diaphragm Airless Oil

- It has the effect on preventing leakage from the gap between piston and cylinder in the pump during the reciprocation.



As standard airless sprayer such as SP-60L and TB-8 is electric motor driven airless sprayer, oil for the main drive is not needed.

Please use **Jet Clean Oil**, SEIWA genuine 4 cycle engine oil for **engine driven airless sprayer such as SP-60GE and 101GE.**

## Replacement oil

Hydraulic oil # 32


## Amount to use

0.9 l

## How to remove and pour the oil


### ① How to remove the oil

The oil falls out after you take off the oil plug and drain plug.

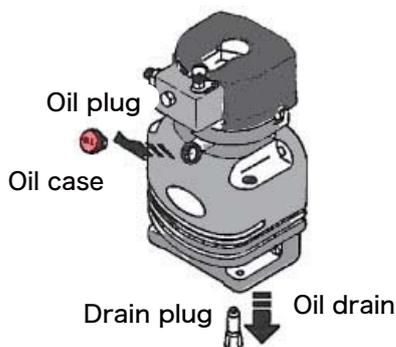

### ② How to pour the oil

After checking the drain plug is tighten, please pour 0.9 l of oil after checking and check the amount of oil by the oil gauge. If it is too much, the oil will leak from the relief valve during operation.

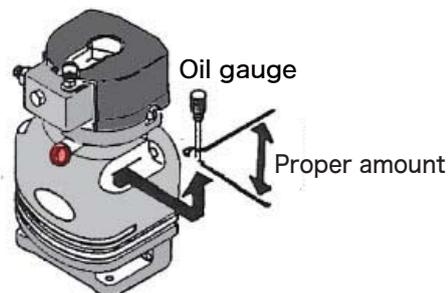

◆ Please feel free to ask us if you have a question ◆