




# Airless Paint Sprayer

## Drawing & Parts list For DP-6318






# Airless Paint Sprayer

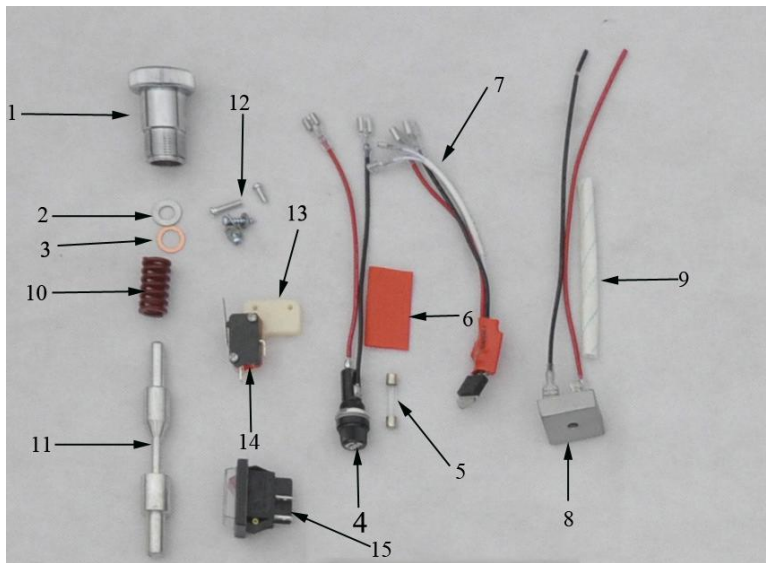


18100	Pressure control board assembly	18108	Bridge
18101	Pressure control knob	18109	Tie wrap
18102	Gasket	18110	Spring
18103	Cooper Gaskets	18111	Valve rod
18104	Fuse seat	18112	Screw
18105	Fuse	18113	Micro switch
18106	Insulated rubber tape	18114	Micro switch
18107	Circuit board	18115	ON/OFF switch

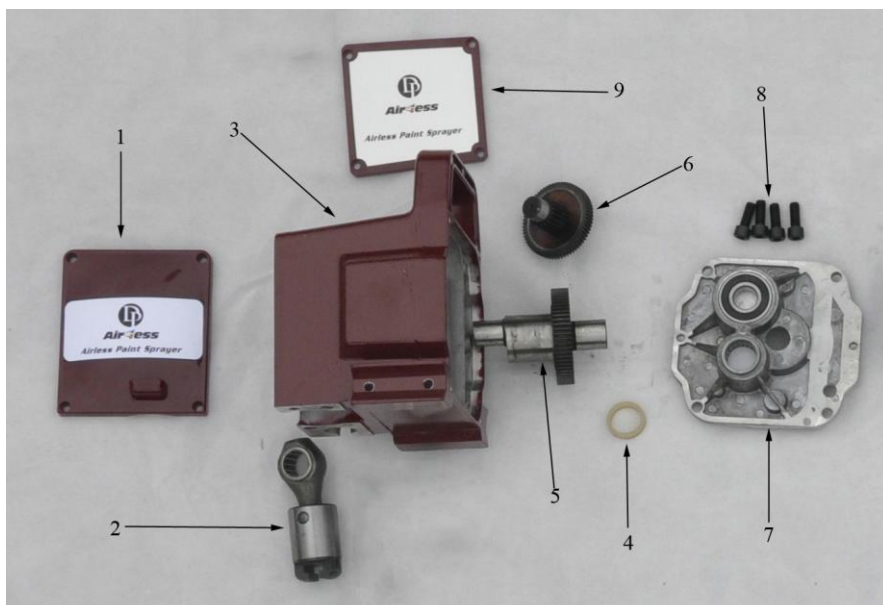

18200	Housing assembly
18201	Front cover
18202	Slider assembly
18203	Drive assembly
18204	Gasket
18205	Gear/crankshaft assembly
18206	1 <sup>st</sup> stage gear
18207	Baffle assembly
18208	Screw
18209	Side board




# Airless Paint Sprayer

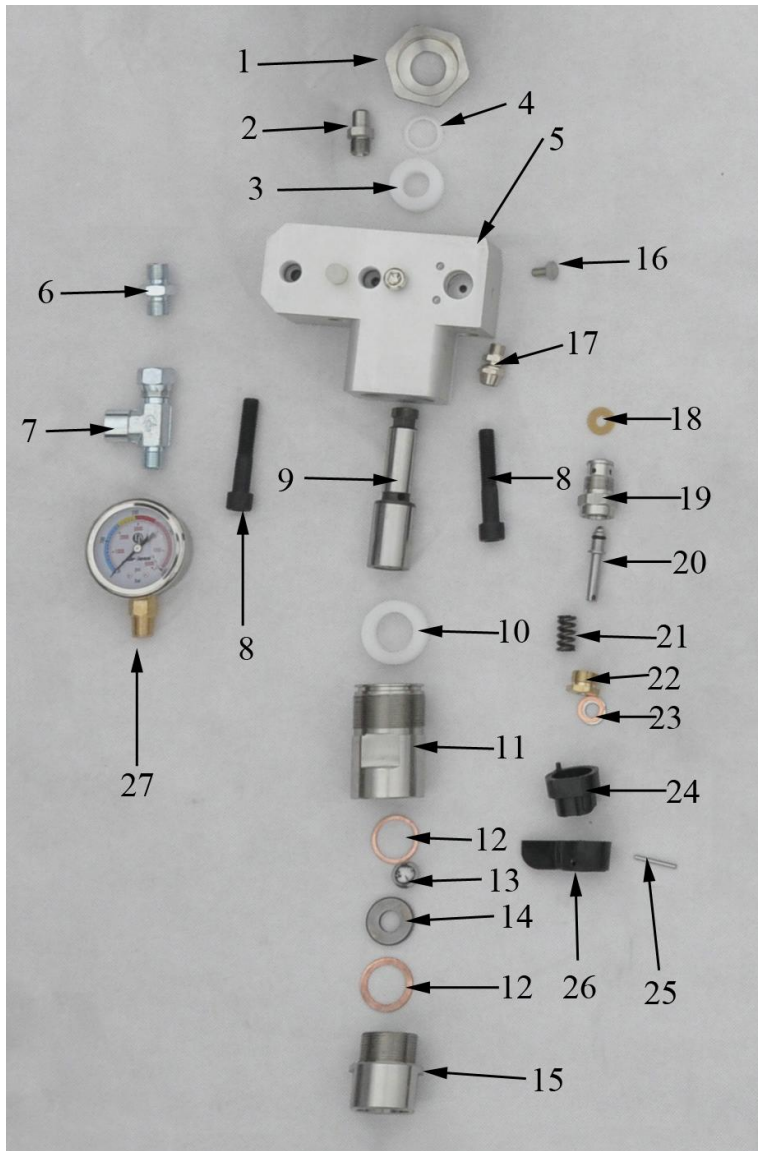


18301	Retainer
18302	Pressure sensor
18303	Upper packing
18304	Spacer
18305	Pump block
18306	Fitting
18307	Connector
18308	Nut
18309	Piston rod
18310	Lower packing
18311	Upper housing
18312	O-ring
18313	Foot valve ball
18314	Foot valve seat
18315	Lower housing
18316	Nut
18317	Fitting
18318	Gasket
18319	Prime/spray valve housing
18320	Prime/spray valve stem
18321	Spring
18322	Prime/spray valve retainer
18323	Gasket
18324	Cam base
18325	Groove pin
18326	Prime/spray valve handle



# Airless Paint Sprayer

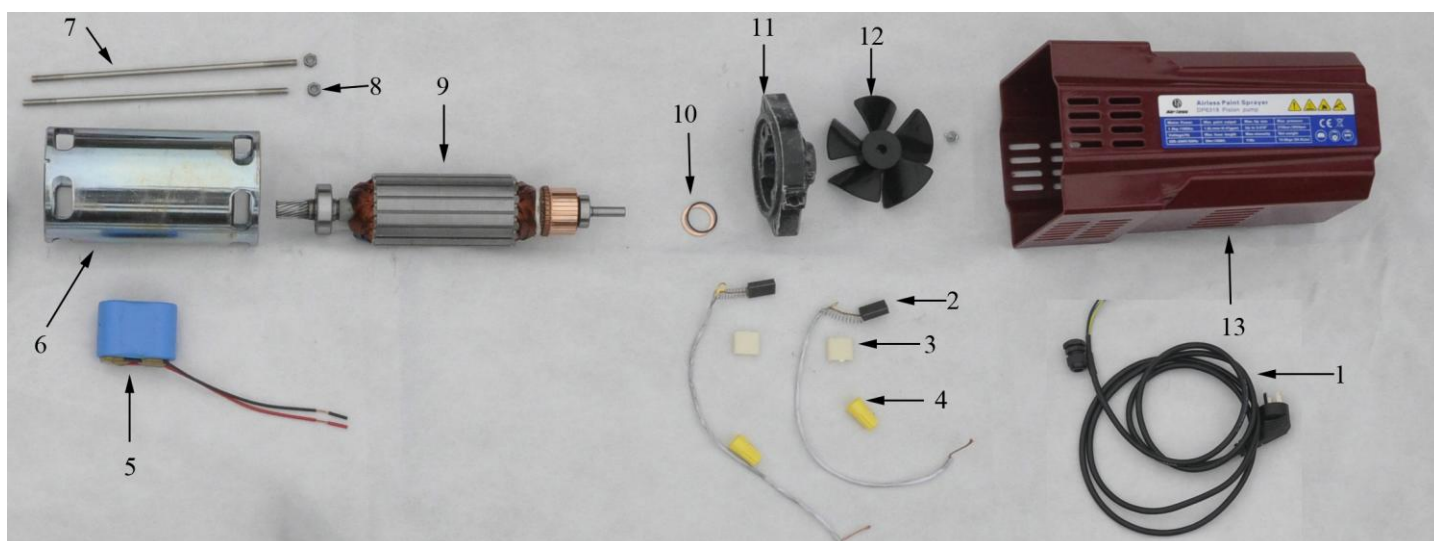

18400	Motor housing assembly	18407	Long screw
18401	Power wire	18408	Nut
18402	Carbon brush	18409	Motor
18403	Retaining clamp	18410	Thrust washer
18404	Cap	18411	Baffle assembly
18405	Capacitor	18412	Fan
18406	Magnetic cylinder	18413	Motor cover

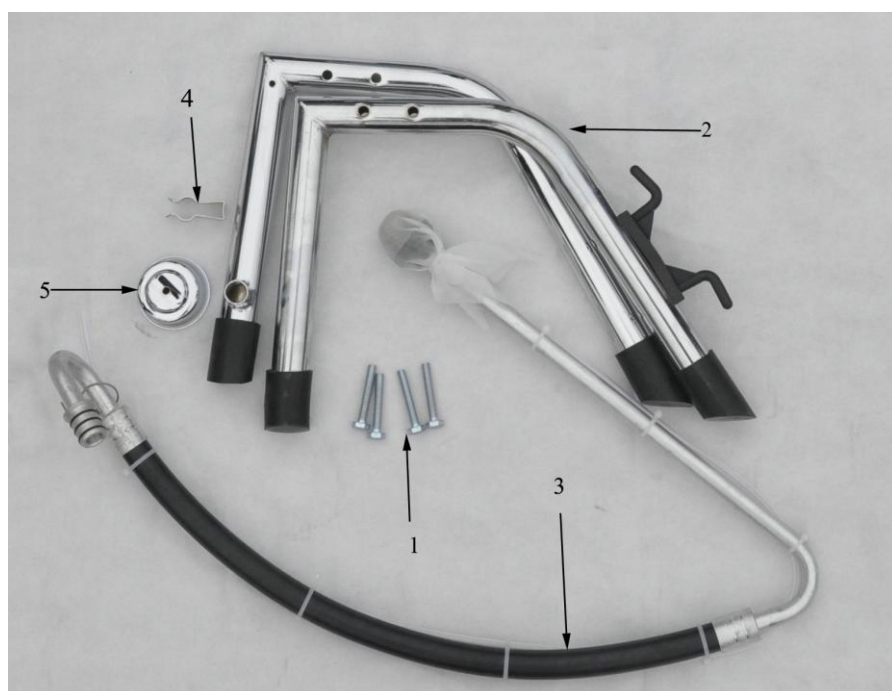

18500	Siphon tube assembly
18501	Screw
18502	Feet
18503	Siphon tube
18504	Hose Clip
18505	Cup
18506	Suction filter